



Silicone Cover Application Instructions

Plug-On Covers

Step 1

Install the bottom panel cover over the transmitter. The DPR-A and HMA/E07 covers have a hole for the external antenna jack. Fit should be snug, and you should be able to see the LCD (*LCD not visible on black opaque version*).



Step 2

Pull the top of the cover fully down over the top of the unit and **overlap** the bottom panel cover securely. The silicone on silicone contact in the overlap keeps dust and moisture from reaching the transmitter housing.



IMPORTANT: The top cover must **OVERLAP** the bottom cover

Step 3


Attach the microphone and apply a high quality, waterproof tape around the neck and where the top and bottom pieces join, for extra protection.



Belt-Pack and Micro Covers

Step 1

Pull the top panel cover fully over the top of the transmitter, making sure the appropriate antenna and jack holes are lined up.

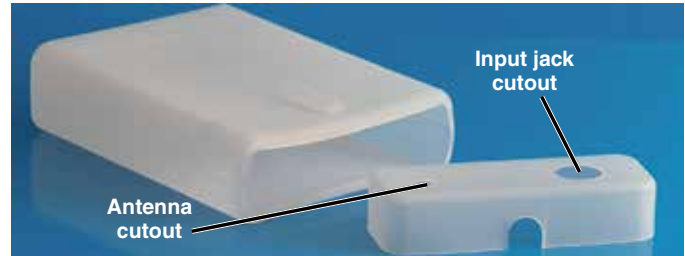

Step 2

Roll on the bottom panel cover. The bottom panel cover should **overlap** the top panel cover. The silicone on silicone contact in the overlap keeps dust and moisture from reaching the transmitter housing.



Match any indents on back of unit

